

INSPECTION AND MAINTENANCE: If flashlight is used less than once a month, remove the batteries between uses. Lubricate all threads and rubber O-rings with petroleum jelly twice yearly. Inspect flashlight monthly and carefully remove any damaged batteries and clean any corrosion.